



## PF6

(example; exact model may vary)

*This instruction handbook is for the daily users of the equipment.*

## Table of Contents

1	Introduction.....	4
1.1	The peristaltic principle .....	4
1.2	Abbreviations in this manual .....	4
1.3	Symbols on the machine .....	4
1.4	Caution and employee safety .....	5
1.5	Essential training before daily use .....	5
1.6	References .....	5
2	General information .....	5
2.1	Unpacking and inspection.....	5
2.2	Technical specifications.....	6
3	Installation .....	8
3.1	Dismantling and disposal.....	8
4	Daily Use.....	9
4.1	Starting-up and running .....	9
4.2	Placing the product container .....	9
4.3	Choosing tubes, y-connectors and filling nozzles.....	10
4.4	Assembly of tubes and Y-connectors.....	11
4.5	Mounting of silicone tubes .....	11
4.6	Dispensing.....	12
4.6.1	Prime tubes .....	12
4.6.2	Problems with drips .....	12
4.6.3	Problems with hard feed.....	12
4.7	Starting the PF6.....	13
4.7.1	Setting of runtime parameters.....	13
4.7.2	Parameters.....	13
4.7.3	Programs.....	13
4.7.4	General information on the setting of parameters of the PF6 .....	13
4.7.5	Used as a filler.....	14
4.8	Stop filling.....	15
4.9	Used as a pump .....	15
4.10	Used with a bottle handling system.....	15
5	Calibration .....	16
5.1	Initial volume calibration .....	16
5.2	Re-calibration .....	16
6	Description of PF6 functions / parameters .....	17
6.1	List of functions.....	17
	Function 1 - Volume.....	18
	Function 2 - Tube diameter .....	18
	Function 3 - Velocity .....	18
	Function 4 - Acceleration/deceleration .....	18
	Function 5 - Reversing (back suction) .....	19
	Function 6 – Batch size.....	19
	Function 7 – Delay .....	19
	Function 8 – Fillings (completed fills) .....	19
	Function 9 – Specific gravity .....	19
	Function 10 – Fills pr. Minute (Output rate) .....	19
	Function 15 – Input mode .....	20
	Function 20 – Operator .....	20
	Function 21 – Batch no. ....	20

Function 24 – Print status .....	20
Function 29 – Print param. (print parameters).....	20
Function 31 – Save program.....	20
Function 32 – Load program .....	21
Function 33 – Delete program.....	21
Function 34 – Print program.....	21
Function 46 – Language .....	21
Function 47 – Printer set-up.....	22
Function 72 – Volume format .....	22
Function 80 – Reset memory .....	23
7 Print-outs.....	23
7.1 Print current parameters .....	23
7.2 Print current status .....	23
7.3 Print programs.....	23
8 Cleaning .....	24
8.1 Cleaning Frequency .....	24
8.2 Preparations for cleaning.....	24
8.3 Cleaning Guidance .....	24
8.4 Detergents or cleaning agents.....	24
9 Maintenance & service .....	25
9.1 Daily maintenance .....	25
9.2 Service .....	25
9.3 Methods and frequency of inspections for safety functions .....	25
9.3.1 Mechanical adjustments .....	25
10 Interface and change of voltage.....	28
10.1 PF6 interface; External GO.....	28
10.2 PF6 interface; RS-232 .....	28
10.3 Change of voltage .....	29
11 Declaration of conformity.....	30

## 1 Introduction

### 1.1 The peristaltic principle

PF6 operates with a peristaltic dispenser head (tube pump), where the liquid only comes into contact with the flexible tube, the tube connections and the filling nozzle. The tubes are usually made of silicone, but other materials can also be used.

The dispenser head is designed in such a way that sterilized tubes can be mounted in the head without affecting the sterility.

The dispenser head is self-priming, and the dispenser head itself can stand to be run dry (not recommended for the sake of the tubes).

The dispenser head on PF6 works with two parallel tubes which are squeezed by rollers mounted on ball bearings. The rollers in are offset in order to eliminate pulsation.

### 1.2 Abbreviations in this manual

e.g.	As example
Fig.	Figure
Hz	Hertz
mA	milli Ampere
msec	milli seconds
PF6	Peristaltic Dispenser
VAC	Volt Alternating Current
VDC	Volts Direct Current

### 1.3 Symbols on the machine


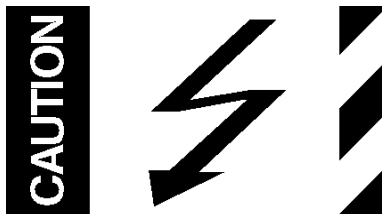
Warning against touching	Warning against high voltage
	

Fig. 1 – Symbols

### **1.4 Caution and employee safety**

This manual should be read before using the PF6.

It is strongly advised that

- Unauthorised / non-trained personnel should not open the cover of the electrical parts
- The machine is placed in such a way that it is not exposed to high humidity, high temperatures or other abnormal operating environment.
- The machine should be used for dosing and filling of liquid fluids, only.

A peristaltic dispenser head is not suitable for viscous products; see section 4.3

### **1.5 Essential training before daily use**

Read the section with *Daily Use*, thoroughly before using the machine.

Protective equipment and protective devices are installed:

- The machine will not run unless the safety cover (Tube Bridge) is placed correctly.
- Always respect the symbols on the machine.

Cleaning must be performed as described in section 8.

### **1.6 References**

N/A

## **2 General information**

### **2.1 Unpacking and inspection**

Please check that all ordered items have been received and that no items are damaged during transport. In case of any defects or omissions, please contact W-M Flexicon or your supplier immediately.

## 2.2 Technical specifications

### Dimensions:

Length: 344 mm  
Width: 314 mm  
Height: 175 mm (incl. Feet)

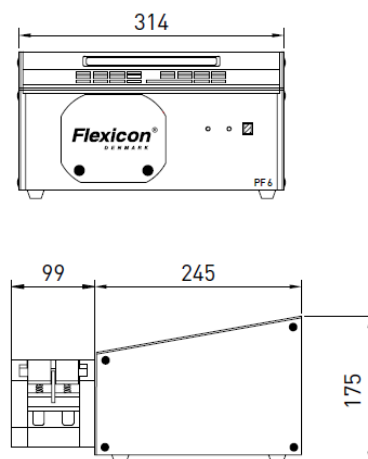


Fig. 2 – Dimensions

### Buttons:

#### online

Lights when communicating with keypad.

#### power

Lights when the machine is on.

#### prime

Pushbutton for tube priming



Fig. 3 - Buttons on PF6

### Display:

The display of the PF6 consists of 2 lines, each of 24 characters.

The display is lit from the back.

The blinking cursor of the display shows where a character will originate, if a key is activated.

FUNCTION NO. : \_\_


F 1: VOLUME (ml) :

Fig. 4 – PF6 display

### Keypad:

The PF6 comes with a membrane-type keypad.

The keypad is sealed and flat and can be cleaned with alcohol and other detergents.

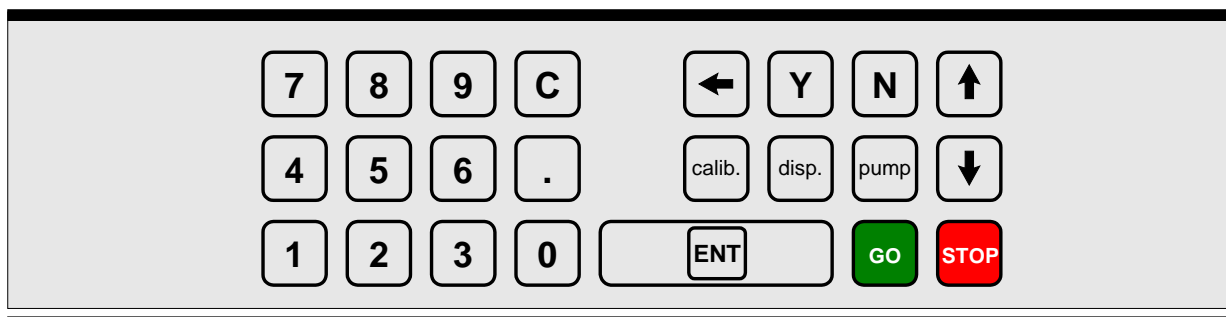

<div> <div> <div>7</div> <div>8</div> <div>9</div> <div>C</div> </div> <div> <div>4</div> <div>5</div> <div>6</div> <div>.</div> </div> <div> <div>1</div> <div>2</div> <div>3</div> <div>0</div> </div> </div> <p>Numerical keys 0 to 9</p>	<div>C</div> <p>"C" : Cancel</p>	<div>←</div> <p>Delete Character to the left of the cursor</p>	<div>Y</div> <p>YES key for YES/NO questions on display</p>	<div>N</div> <p>NO key for YES/NO questions on display</p>	<div>↑</div> <p>Scroll the status line one line up</p>
	<div>.</div> <p>Decimal point</p>	<div>calib.</div> <p>Activates calibration</p>	<div>disp.</div> <p>Activates filling</p>	<div>pump</div> <p>Activates continuous pumping</p>	<div>↓</div> <p>Scroll the status line one line down</p>
	<div> <div>ENT</div> </div> <p>Enter / pressed after entering of values typed on the keyboard.</p>			<div>GO</div> <p>Start Button</p>	<div>STOP</div> <p>Stop Button</p>

**Fig. 5 – PF6 Keypad**

### Other:

Weight:

11 kg

PF6 Power consumption:

max 150 Watt

Mains:


110/230 VAC earthed, 50/60 Hz

Ingress protection:

IP31

### 3 Installation

PF6 must be placed on a stable bedplate, and all electrical connections are on its rear.

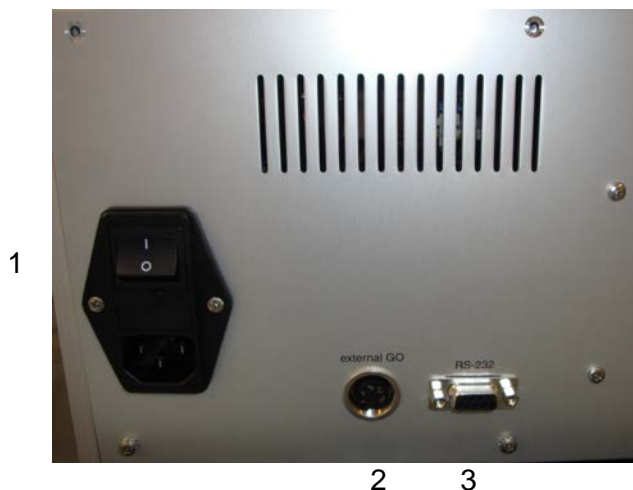

**Fig. 6 - Connections**

The cable with plug (1) is connected to an earthed switch.

The External GO (2) plug is for the connection of a foot switch or for an external starting signal.

The RS-232 (3) plug is for printer connection.

#### **3.1 Dismantling and disposal**

Prior to dismantling, it must be observed that all services are disconnected, and fixing to other equipment is removed.

WM-Flexicon machines may not be disposed using normal refuse collection. The machines must be collected and disposed separately as they contain electrical components such as batteries, electrolyte capacitors, liquid crystal displays and printed circuit boards. Further information is available on [www.wmflexicon.dk](http://www.wmflexicon.dk).





## 4 Daily Use


### 4.1 Starting-up and running

Installation section must be carried out before this chapter can be performed.

### 4.2 Placing the product container

In order to get an optimal filling; i.e. best accuracy, long periods between each calibration and the best capacity, the product container should be placed at the same level as pump head or preferably above the pump head level. The length between container, pump head and filling nozzle must be as short as possible.

Placing the container higher than pump head level provides positive product support and may reduce the calibration interval. It is also recommended to place the container as close as possible to the pump on suction side.

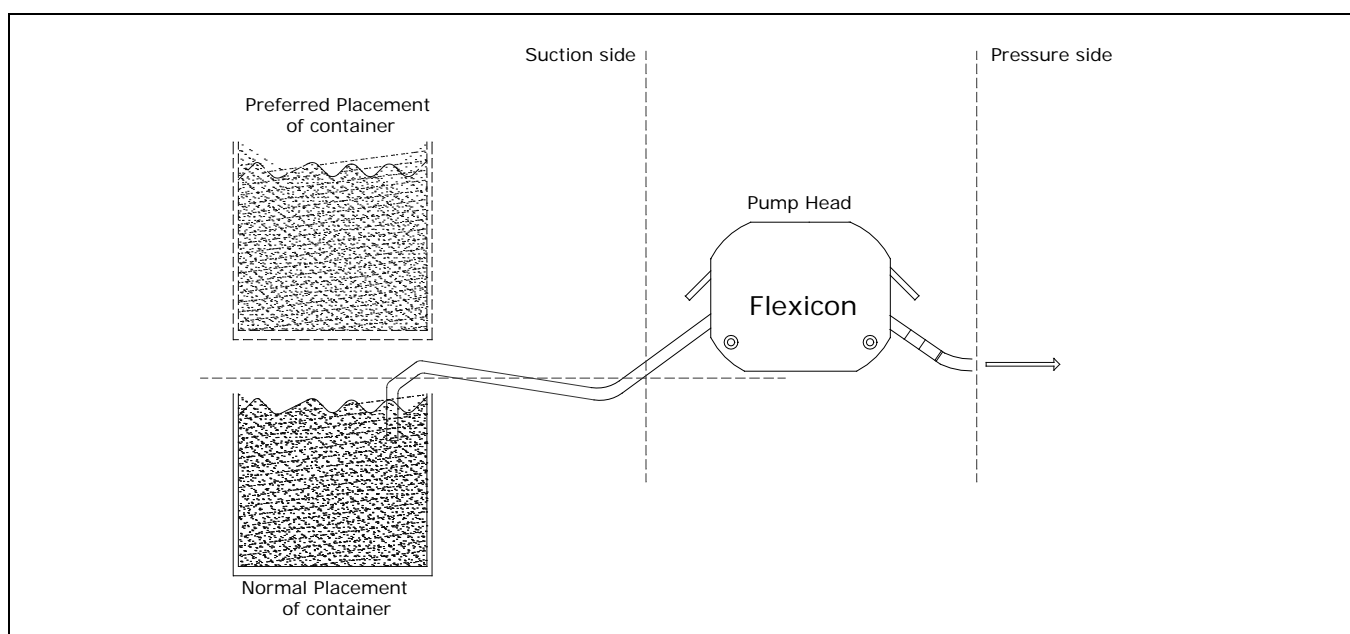

**Fig. 7 - placing the product container**

### 4.3 Choosing tubes, y-connectors and filling nozzles

The filling is carried out by the PF6 which is controlled via the keypad.


The capacity is based on the volume to be dispensed, however a lot of factors can influence on the obtainable capacity; e.g. choice of tubes and type of product.

These aspects must be considered before choosing the filling settings.

Tubes must be selected according to the application and volume to be filled. Use the table shown below for choice of tubes according to minimum volume to be filled.

PF6 can operate with different tube dimensions chosen according to the volume to be dispensed. The tubes are designated by their internal diameters (i.d.) in millimetres. This value is always used as designation for the individual tube, and this is also the value to be entered in function 2.

In order to obtain stable and good results, the choice of tubing can be made according to the following guidelines:

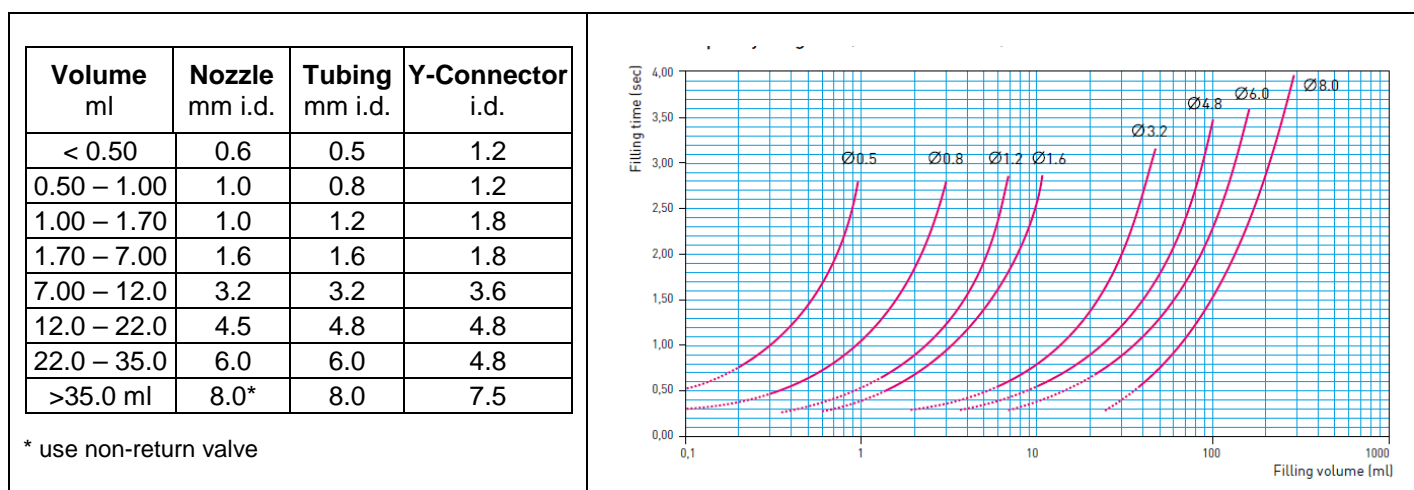


Tubes must be cut in the right length in order to achieve optimal dispensing.

The filling time for a volume of 10.0 ml with a Ø3.2 ID tube is 0.8 seconds with dispenser running in high speed i.e. 400 in rpm and 100 in acceleration.

The same volume can be obtained with Ø4.8 ID tube in 0.55 seconds for the same parameters. The contrast here is outweighed by the fact that Ø3.2 ID tube will in this case yields better accuracy than the option of using Ø4.8 ID. But as it is indicated the capacity will be higher with Ø4.8 tube since filling time is less.

The above mentioned example should be considered as guidance only, and adjustments should be done for the individual applications.



#### 4.4 Assembly of tubes and Y-connectors
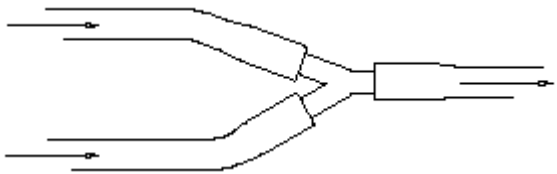
<p>Before mounting the tubes in the dispenser head the tubes must be assembled with a Y-connector.</p> <p>When the Y-connector has been assembled, mount the tubes in the dispenser head, as shown in 4.5</p>	 <p>Each set of tubes and y-connector must be assembled as this.</p>
---	--

#### 4.5 Mounting of silicone tubes

PF6 is equipped with tube bridges and tube locks. The tube locks ensure that the mounted tubes do not slide through the pump head when dispensing.

The tube bridge retains the tube and performs the necessary pressure on the tubes.

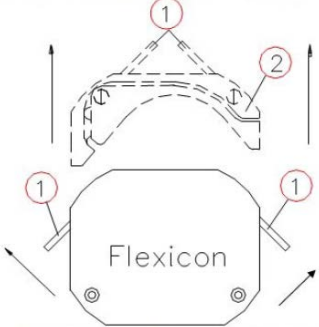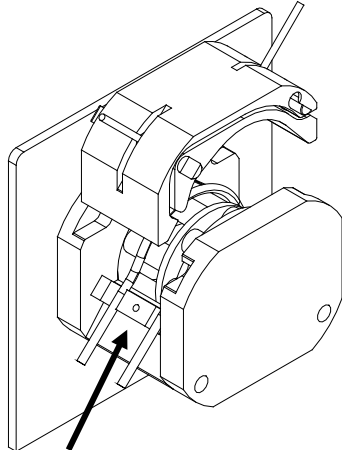
<p>Open the dispenser head by tipping each of the two locking pins up (1) and lift the tube bridge (2)</p> <p>Mount the wanted tube size together with the matching tube lock.</p> <p>Press down the two locking pins (1)</p> <p><i>Never leave the dispenser mounted with tubes overnight.</i></p> <p><i>At least tip the locking pins (1) up in order not to retain the tube in pressure.</i></p>	 <p>Opening the dispenser</p>	 <p>See next picture</p>
---	---	--

**Fig. 8 – Mounting of silicone tubes**

Mount the correct tube lock (1) on its dowel pin and place the tubes in the dispenser head.

The Y-connector must be situated to the right of the dispenser head.

It is important that the tubes are situated in the two notches (2+3). Now place the tube bridge in its tracks and engage the two locking pins.

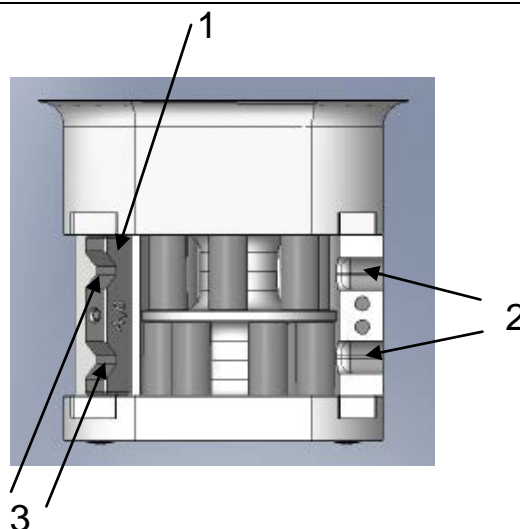

## 4.6 Dispensing

### 4.6.1 Prime tubes

When the tubes and Y-connectors have been assembled and mounted in the pump head, the tubes must be primed; priming tubes have the purpose of filling the tubes with the product.

First, place the product container.

Hold a collecting bowl under the filling nozzle(s) press the prime button.

Check that the tubes are free of bubbles and that the end of the tubes on the suction side, are under the liquid surface. The suction tubes must not have contact with the container body.

### 4.6.2 Problems with drips

During filling drips can cause incorrect filling volumes and that the area underneath the filling nozzle becomes contaminated. If drips occur the following can be tried:


- choose a smaller filling nozzle
- decrease speed
- increase acceleration
- use reversion
- mount a non-return valve

### 4.6.3 Problems with hard feed

When dispensing with small tubes, counter pressure on the pressure side of pump head might constitute inaccuracy and instability in filling (hard feed). In some cases the problem can be resolved by using a larger tube on the pressure side (after Y-connector).

## 4.7 Starting the PF6


Turn the PF6 on.

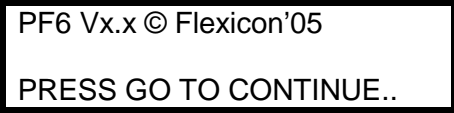

PF6 Vx.x © Flexicon'05  
PRESS GO TO CONTINUE..

**Fig. 9 – Starting PF6 -1**

Press the <GO> key and the display will show the following:

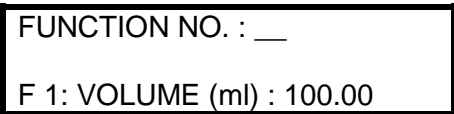

FUNCTION NO. : \_\_\_\_  
F 1: VOLUME (ml) : 100.00

**Fig. 10 – Starting PF6 -2**

The values displayed in the status lines will be the above or the latest values used.

PF6 is now ready for setting of runtime parameters.

In the following, the sign <> will mean that the indicated key must be activated.  
For instance, <ENT> means that ENTER must be pressed.

### 4.7.1 Setting of runtime parameters

The PF6 is function-controlled and each parameter has its own function number.  
The function is called by entering the number and pressing <ENT>.  
This can be done independently of the position of the cursor on the status lines.

### 4.7.2 Parameters

In the following a parameter will be the value of a single function, e.g. volume, velocity, number of fillings etc.

### 4.7.3 Programs

In the following description a program will be a complete set of runtime parameters, which together will constitute the PF6 work instructions.

### 4.7.4 General information on the setting of parameters of the PF6

The PF6 is equipped with a battery in the memory and will therefore always remember the programmed parameters, even if the main isolator is turned off.

This also means that when a function is called, the value last used will be suggested. The value may be overwritten or approved by pressing <ENT>.

The setting of parameters is done using functions. Each parameter has its own function number.

The setting of a parameter is carried out by entering the corresponding function number followed by "ENT".

This will make the required function appear in the prompt line of the display and show the current value or information of the function.

This value will automatically be overwritten when entering a new value. After being entered, the new value will be shown in the prompt line. The new value is entered into the computer by pressing "ENT".

The new value will be shown in the status lines at once.

Example:

If a volume of **8.5 ml** is required, the following should be entered:

<1>+<ENT>+<8>+<. >+<5>+<ENT>

#### 4.7.5 Used as a filler

##### Example of filling job:

Volume: 8.5 ml.

Tube: 3.2.

Velocity: 400 rpm.

Acceleration: 100.

Back suction: 1

100 fill to be completed.

A delay of 1.1 seconds between each filling.

Product has a specific gravity 1.0

##### The above job should be programmed as follows:

Volume:	<1>+<ENT>+<8>+<. >+<5>+<ENT>
Tube:	<2>+<ENT>+<3>+<. >+<2>+<ENT>
Velocity:	<3>+<ENT>+<4>+<0>+<0>+<ENT>
Acceleration:	<4>+<ENT>+<1>+<0>+<0>+<ENT>
Back suction:	<5>+<ENT>+<1>+<ENT>
Number of fills:	<6>+<ENT>+<1>+<0>+<0>+<ENT>
Delay:	<7>+<ENT>+<1>+<. >+<1>+<ENT>
Specific Gravity	<9>+<ENT>+<1>+<. >+<0>+<ENT>

You have now programmed the PF6 for the job, but want to reset the built- in counters. In function 8 the counters indicate "number of completed fills".

Number of fills: <8>+<ENT>+<C>+<ENT>

Now inform PF6 that you want to enter filling mode by pressing <disp.>.

Every time <GO> or the foot switch is pressed, or every time an electric signal is given, PF6 will run 100 fills of 8.5 ml with a delay of 1.1 seconds between the fills.

Press <GO>, verify that PF6 starts and let it run.

Press ARROW DOWN until you see function 8 on the status line and that F8: is counting each fill.

F10: gives a current indication of the number of fills completed per minute.

The fills have not been calibrated. For this function, please see chapter 5 of this manual.

#### **4.8 Stop filling**

When PF6 has completed the number of fills asked for in F6: it will stop automatically. If <GO> is pressed again, PF6 will complete the programmed number of fills once more.

If you want to stop the filling before the programmed number has been completed, press <STOP>, and PF6 will stop after completing the filling in progress.  
The filling series can be completed by pressing <GO>.

If you want to stop IMMEDIATELY, such as in the middle of a fill, press <STOP> twice, and PF6 will stop immediately.

The filling series can be completed by pressing <disp.>+<GO>, and the interrupted filling will be included.

#### **4.9 Used as a pump**

PF6 can also be used as a pump.  
In this case only velocity should be entered.

Start the pumping by pressing <pump>+<GO>.

PF6 will start and run the required number of revolutions per minute.  
PF6 will pump at this velocity until stopped by pressing <STOP>.

#### **4.10 Used with a bottle handling system**

PF6 can also be used together with a bottle handling system like FF20/FF15 from Flexicon.  
When PF6 is integrated in an automatic bottle handling system, it is important to observe the following:

The batch size in case of running with a bottle handling system must be set to 1.  
The PF6 should be in dispense mode before starting the filling sequence.  
The Go signal which activates filling should be generated by the bottle handling system.  
The Go signal should be inserted into PF6 via External Go port (see section 10.1)

## 5 Calibration

As the environment of the PF6 may vary from time to time and as tubes and products have small tolerances, it is necessary to calibrate the drive when it is started. Recalibration is necessary during production.

If the quantity has been entered as volume in ml, a measuring cylinder or a balance may be used as a control and measuring unit. The balance will always be the more accurate, especially for small quantities.

### 5.1 Initial volume calibration

If a volume has been entered in function 1, and a completed fill is measured with a balance, the specific gravity of the liquid in question is to be entered in function 9.  
(The parameters already entered may be used for a trial).

Prepare the balance by tarring the container and make sure that the tubes are completely filled, up to and including the filling needle.

It is recommended to let the filler complete a few fills before the calibration is carried out.

Keep the tarred container below the filling needle and complete a single fill by pressing <calib>+<GO> and PF6 will now ask for the completed volume showing the following display:

<p>CALIB. WEIGHT : 0.0000__</p> <p>F 1: VOLUME (ml) : 8.50</p>
--

**Fig. 11 – Calibration**

In the prompt line, PF6 asks the weight, and the WEIGHT of the trial fill in question must be entered, for example. 8.12: <8>+<. >+<1>+<2>+<ENT>

After calibration, complete a few fills and draw off a sample and check the volume.

If the volume is not at the level desired, carry out a re-calibration as described below.

Function 8 should now be reset, and the filling may be started by pressing <disp.>+<GO>.

### 5.2 Re-calibration

During production it may be necessary to recalibrate the volume dispensed by the filler to compensate for changes in the environment e.g. the liquid level of the feed vessel will sink. This re-calibration may be carried out without stopping the filling.

IT IS IMPORTANT TO USE THE SAME MEASURING METHOD FOR THE RECALIBRATION AS USED FOR THE INITIAL CALIBRATION.

Draw off a filled sample and measure it. If the volume is not at the level desired, press <calib> + <Ent> and then insert the measured value. Subsequently, let the production continue and draw off a sample to check the volume again.

PF6 will now automatically adjust the subsequent fills.



## 6 Description of PF6 functions / parameters

### 6.1 List of functions

1. Volume	21. Batch no.
2. Tube diameter	24. Print status
3. Velocity	29. Print param. (print parameters)
4. Acceleration/deceleration	31. Save program
5. Reverse (back suction)	32. Load program
6. Batch Size	33. Delete program
7. Delay	34. Print programs
8. Fillings (Completed fills)	46. Language
9. Sp. Grav. (Specific gravity)	47. Printer-setup
10. Fills pr. Minute (Output rate)	72. Volume format
15. Input mode	80. Reset memory
20. Operator	

### Function 1 - Volume

Value: ml

Function 1 informs the system of the volume to be filled.

Value		Option
Min	Max	
0.01	9999.9	ml. or gram

The entered value must be between 0.01 and 9999.9.

### Function 2 - Tube diameter

Value: Inside diameter of the tube in mm.

Drive type	Tube inside diameter in mm							
PF6	0.5	0.8	1.2	1.6	3.2	4.8	6.0	8.0

### Function 3 - Velocity

Value: Revolutions per minute (rpm).

Velocity range depends on tube size applied.

Range:

Tube Sizes	Max. Velocity	Max. acceleration
0.5 - 0.8 – 1.2 – 1.6	400	100
3.2	400	100
4.8 - 6.0 – 8.0	400	100

The fastest filling will be carried out at the highest velocity setting but the velocity should always be adjusted to suit the characteristics of the product and to reduce splashing or foaming.

### Function 4 - Acceleration/deceleration

Value: An integer number.

This function offers a choice of values between 1 and 100 dependent on the tube size and drive;  
 1 = slowest, 100 = fastest.

Tube Sizes	Max. Velocity	Max. acceleration
0.5 - 0.8 – 1.2 – 1.6	400	100
3.2	400	100
4.8 - 6.0 – 8.0	400	100

**Function 5 - Reversing (back suction)**

Value: An integer number.

After each filling the pump head can be set to perform a small back suction to prevent dripping.

The back suction can be set at values between 0 and 10.

0 = no back suction

10 = maximum back suction

The value has no relation to any other parameters and is solely a number of degrees of a rotor turn. Consequently, the volume that is sucked back will depend on the tube diameter.

**Function 6 – Batch size**

Value: An integer number.

Enter the number of fills you want the filler to perform when started by <GO>, foot switch or via electrical signal. Any number of fills between 1 and 65,000 can be selected.

**Function 7 – Delay**

Value: Seconds.

If more than one fill is chosen in function 6, enter the required delay between the fills.

The value of the delay can range between 0.1 - 25.0 seconds, with a graduation of 0.1 second.

**Function 8 – Fillings (completed fills)**

Value: An integer number

Nothing can be entered in this function as it only displays the number of fills completed since the latest reset of the function.

To reset this function: Press the keys <8>+<ENT>+<C>+<ENT>

**Function 9 – Specific gravity**

Value: Numerical

The specific gravity of the product used can be entered here.

Default value for this function is 1.0000 g/ml.

The PF6 uses this value to obtain the volume in F1, when volume mode is used.

Changing specific gravity should be followed by a calibration.

**Function 10 – Fills pr. Minute (Output rate)**

Value: Number of fills per time unit.

Nothing can be entered in this function as it only displays the current output.

The function displays how many fills the system carries out per time unit.

The function operates as follows: The PF6 records the precise time between two fills via the built-in clock, and calculates the number of fillings per time unit.

The display is updated at the completion of each fill.

The function can be called up for viewing, but it cannot be reset and values cannot be entered in this function.

**Function 15 – Input mode**

Value: 1 or 2

1 = The foot switch will only function as a starter.

2 = First press on the foot switch starts the filler.

Second press on the foot switch stops the filler.

Third press on the foot switch starts the filler.

**Function 20 – Operator**

Value: An integer number

The maximum number of digits in an operator number is 10. This means that an operator number is an integral number between 0 and 999999999999.

With this function it is possible to inform the system which operator is in charge of the current production. The operator number entered will always appear on print-outs of the log (F24) and the operating parameters (F29).

**Function 21 – Batch no.**

Value: An integer number

The maximum number of digits in a batch number is 10. This means that a batch number is an integral number between 0 and 999999999999.

With this function the operator can inform the system of the batch or production number under which the current production is recorded. The batch number entered will always be shown on print-outs of the log (F24) and print-outs of the operating parameters (F29).

**Function 24 – Print status**

If a printer is connected, this function will start the printing of the current production status.

**Function 29 – Print param. (print parameters)**

This function prints the current parameters via the connected printer.

The print-out is for the current drive or all the current drives.

When the function is called, the system will ask the following questions:

PRINT PARAM (Y/N)

For print-out of the current drive only, press <Y>.

For print-out of all connected drives, press <N>.

**Function 31 – Save program**

Saves a complete set of parameters as a program.

It is possible to save up to 5 sets of parameters in the memory.

If a particular set of parameters is used frequently, it is a good idea to store the settings in order to allow their easy retrieval as a complete filling program. This also ensures that exactly the same parameters are used each time thereby reducing the risk of programming error.

It is important that all parameters are entered and that these parameters are checked before saving the program saved via Function 31.

The system will always suggest the first available number in a range between 1 and 5.

If this number is to be accepted as the program number, press <ENT>, and all parameters will be saved under this program number.

If another number is required, enter the number chosen, and if this number is free, the program is saved by pressing <ENT>.

If the number is occupied by a program already saved, user is asked whether to overwrite the program already saved.

### **Function 32 – Load program**

Loads a program already saved and overwrites the current parameters with the values of the program.

By pressing the required program number followed by <ENT>, the operating parameters saved under the specified program number will be entered as the current parameters under the respective functions.

If program number 0 is selected, the function is left without loading a program and the system will keep the current values.

### **Function 33 – Delete program**

If a complete program is to be deleted, this can be done by overwriting it via Function 31, or the program can be deleted via Function 33.

When pressing the required program number followed by <ENT> the specified program will be deleted.

If a number is entered under which no program is saved, the system will not accept it and the number must be corrected, or the function can be left by pressing <0>+<ENT>.

### **Function 34 – Print program**

This function prints the individual parameters in all the programs stored in the memory.

When pressing <N> the system will leave the function, without carrying out the function. When pressing <Y> the system will start printing the parameters in all programs saved.

### **Function 46 – Language**

Value: An integer number.

This version offers a choice of two languages.

1 - English

2 - German

The languages will be active on the display and on the print-outs.

### Function 47 – Printer set-up

Function 47 tells the system which protocol to use when transmitting to connected printer. When this function is activated, it will first require the operator to enter the transmission velocity (baudrate).

One of the following values must be chosen:

75	300	2000
110	600	2400
134	1200	4800
150	1800	9600

Subsequently PF6 will ask the operator to enter a protocol number (controlword). There is a choice between the following protocols:

1 =	7 data bits	1 stop bit	no parity
2 =	7 data bits	1 stop bit	even parity
3 =	7 data bits	1 stop bit	odd parity
4 =	7 data bits	2 stop bits	no parity
5 =	7 data bits	2 stop bits	even parity
6 =	7 data bits	2 stop bits	odd parity
7 =	8 data bits	1 stop bit	no parity
8 =	8 data bits	1 stop bit	even parity
9 =	8 data bits	1 stop bit	odd parity
10 =	8 data bits	2 stop bits	no parity
11 =	8 data bits	2 stop bits	even parity
12 =	8 data bits	2 stop bits	odd parity

It is not possible to set the system to transmit at any other rates or formats.

### Function 72 – Volume format

Value: An integer number.

Volume format for “function 1”.

The function makes it possible to change volume format between 1: volume (ml) and 2: weight (g).

**Function 80 – Reset memory**

This function will reset the memory with the exception of the part used for saving programs. The PF6 will enter stand-by mode, and when switched on again the built-in parameters will be valid.

IF THE PF6 DOES NOT WORK OR DOES NOT OPERATE AS EXPECTED, ACTIVATE FUNCTION 80.

**7 Print-outs**

PF6 can be connected to a printer (via RS-232) which can produce three different types of print-outs.

**7.1 Print current parameters**

Function 29 prints the current parameters, and print-outs should be made after programming and calibrating PF6 and resetting function 8.

The print-out is started in the following way: <2>+<9>+<ENT>  
Press the <Y> key to confirm start of printing, and the printer will start.

**7.2 Print current status**

Function 24 prints the current status, and print-outs should be made after completion of the filling series.

The printing is to be started in the following way: <2>+<4>+<ENT>.  
Press the <Y> key to confirm start of printing, and the printer will start.

After the status print-out the printer memory is deleted automatically.

**7.3 Print programs**

Up to five programs can be stored in PF6, and a list of saved programs can be printed by means of function 34.

The printing is to be started in the following way: <3>+<4>+<ENT>  
Press the <Y> key to confirm start of printing, and the printer will start.

## 8 Cleaning

### 8.1 Cleaning Frequency

As PF6 is not in direct contact with the dispensed product, daily cleaning might not be necessary.

Cleaning might be determined by local sop's and cleaning validations; but must never be with detergents more potent than the ones below.

### 8.2 Preparations for cleaning

Before cleaning the machine:

- Turn off the power
- Remove the tube bridge
- Remove the tubes

### 8.3 Cleaning Guidance

Correct cleaning of the PF6 is carried out by washing it off with water or detergents, using a lint-free firmly wrung cloth or lint-free paper towel; subsequently the machine is wiped off with a dry cloth.

### 8.4 Detergents or cleaning agents

Normal cleaning agents such as tepid/medium hot water, ethyl alcohol (ethanol) 70% and may be used all over the machine.

The PF6 consists of stainless steel and anodized aluminium, and can be cleaned in several ways:

Cleaning of parts made of:	May be autoclaved	Can be cleaned with ethyl alcohol 70%	Can be cleaned with water and afterwards wiped off with dry a cloth
Stainless steel AISI304	X	X	X
Stainless steel AISI316L	X	X	X
Anodized aluminium	X	X	X
Silicone tubes / Y-connectors	X** Max 10 times	X	X

#### Examples:

- Flexicon silicone tubes can be autoclaved
- PF6 has a membrane-type keypad. The keypad is sealed and flat and can be cleaned with alcohol or water.

**\*\*Recommendation:**

*Keep a log on the cleaning in order to keep a sense of perspective.*



## 9 Maintenance & service

### 9.1 Daily maintenance

PF6 does not require any special daily maintenance, such as lubrication or the like.

### 9.2 Service

Should service be needed, please contact W-M Flexicon or your local supplier.

### 9.3 Methods and frequency of inspections for safety functions

Safety functions should be tested once a year:

#### ➤ Tube Bridge

Remove the tube bridge and press PRIME.

The machine must not start if the tube bridge is not present.

Keep a log and read the previous log recordings to present an overview of the machines state. After testing the safety functions the results must be recorded in the log.


#### 9.3.1 Mechanical adjustments

##### Pump pressure



For adjustment of pump pressure for PF6 you will need the following:

- Pressure gauge suitable for measuring 0.8 - 0.9 bar and 3.0 - 3.5 bar
- Ø1.6 ID tube (app 0.5 m)
- Ø8.0 ID tube (app 0.5 m)
- Screwdrivers
- Loctite 2400

*Illustration*

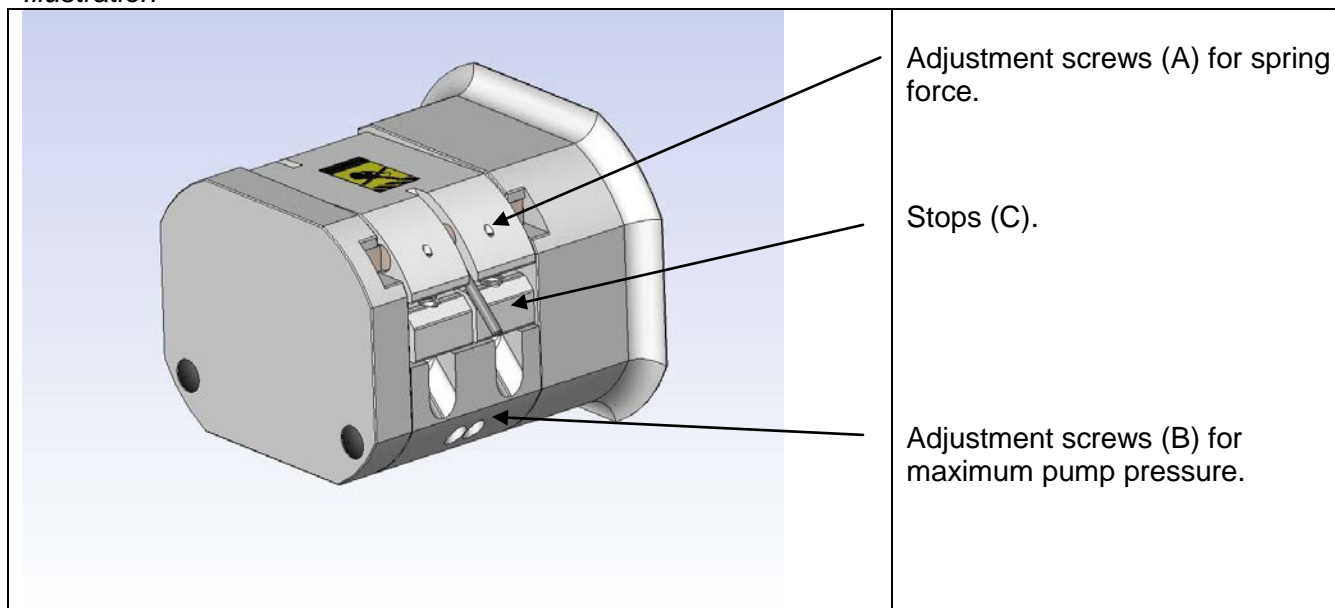
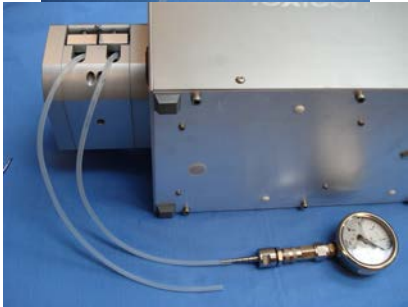



### Adjusting the spring force

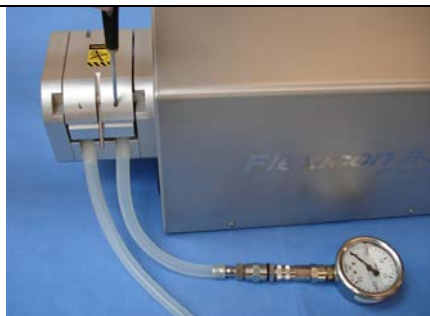Step	Action	Remarks / control
1.	Remove the pads covering the adjustment screws.	NA
2.	Screw down the adjustment screws (B) until the upper side of the stops (C) are aligned with the intermediate part of the pump head.	Note that adjustment screws B are locked by use of glue. Use a suitable screwdriver and use necessary force.
3.	Mount Ø8.0 ID tubes in the pump (2 separate pieces of tube open at both ends). Observe that tubes lay correctly in the pump.	NA
4.	Set speed for 100 rpm and start the pump.	NA
5.	Connect pressure gauge to outlet end of tube and measure outlet air pressure.  The 2 “channels” must be adjusted separately.	
6.	Adjust the spring force action on the tubes by use of adjustment screws (A).  The outlet air pressure should be adjusted to 0.8 – 0.9 bar.	
7.	Stop the pump	NA

### Adjusting the pump pressure

Step	Action	Remarks / control
1.	Mount Ø1.6 ID tubes in the pump (2 separate pieces of tube open at both ends). Observe that tubes lay correctly in the pump.	NA
2.	Set speed for 100 rpm and start the pump.	NA
3.	Connect pressure gauge to outlet end of tube and measure outlet air pressure.  The 2 “channels” must be adjusted separately.	NA

Step	Action	Remarks / control
4.	Adjust the screws (B) for control of maximum pressure. The outlet air pressure should be adjusted to 3.0 – 3.5 bar.	  
5	Should it become necessary to put in new glue, use a "soft" glue like Loctite 222.	

## 10 Interface and change of voltage

### 10.1 PF6 interface; External GO

"External GO" is designed as a 5-pin DIN plug with the following PIN configuration:	
PIN 1:	INPUT FOR START SIGNAL +5 - 50 VDC, min. 100 msec. positive-edge-triggered.
PIN 2:	OUTPUT, +24 VDC, MAX. 250 mA.
PIN 3:	GROUND.
PIN 4:	STATUS OUTPUT, MAX. +24 VDC, 100 MA. Pin 4 is grounded via an open collector during filling.
PIN 5:	STATUS OUTPUT, MAX. +24VDC, 100 mA Pin 5 is complementary to pin 4.


### 10.2 PF6 interface; RS-232

RS-232 has a 9-pin SUB-D plug:	
PIN 1:	No connection
PIN 2:	Receive data
PIN 3:	Transmit data
PIN 4:	+12 VDC (at 1 kOhm)
PIN 5:	Ground
PIN 6:	No connection
PIN 7:	Request to send
PIN 8:	Clear to send
PIN 9:	No connection

### 10.3 Change of voltage

The PF6 can be converted to accept another supply voltage.

The conversion can be made inside the machine by moving the cables of the transformer clamps.

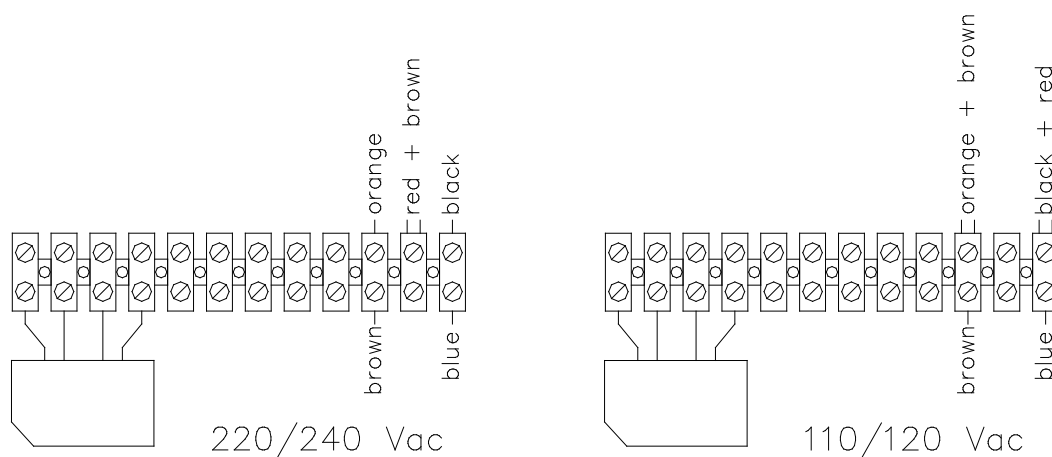

**Fig. 12 – Change of voltage**

PF6 can be changed over to different main powers.

The change over is carried out inside the machine by moving the wires to the positions indicated in fig. 12.

## 11 Declaration of conformity

We            Watson-Marlow Flexicon A/S  
                Frejasvej 2-6  
                DK-4100 Ringsted

Declare on our sole responsibility that the product:

### PF6

<b>WATSON MARLOW Flexicon</b>	<b>CE</b> 2010 Made in Denmark
Model	PF6
Serial No.	xxxx yyyy
Part No.	91-050-008
Supply:	230V / 50-60Hz / 50W

to which this declaration relates is in conformity with the following standard(s):

DS EN/ISO 12100	Safety of machinery - Basic concepts, general principles of design
DS/EN 60204	Safety of machinery – Electrical equipment of machines

According to the provisions in the Directives:

2006/42/EC	On the approximation of the laws of the Member States relating to machinery
2006/95/EC	On the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits
2004/108/EC	On the approximation of the laws of the Member States relating to electromagnetic compatibility

Signature:



September 2010

Ringsted, Denmark

Jørn Jeppesen, Development Manager